




# Olympus C-765 Lens Replacement

Changing the lens may offer a wide variety of shooting options by changing the focal length. Lens may also be replaced if they are broken or malfunctioning.

Written By: Mason Morgan

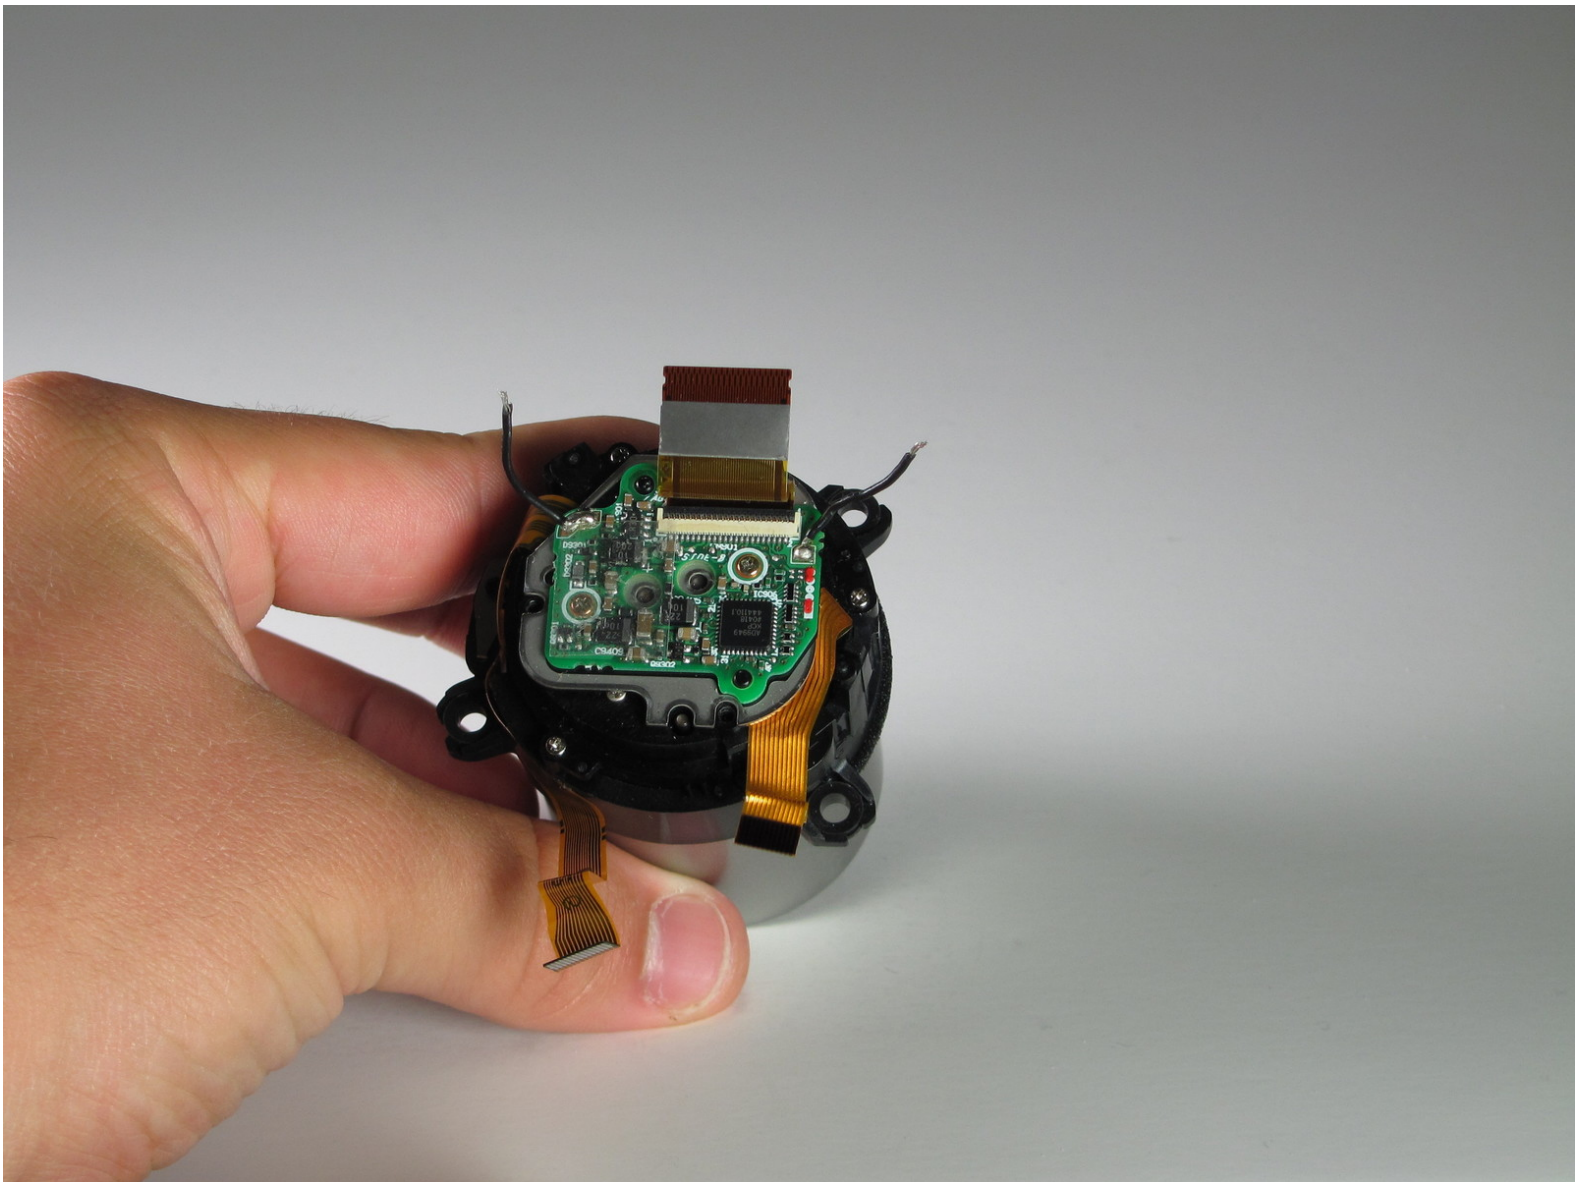

## INTRODUCTION

The lens may be cracked, dirty, or just need to be replaced. This guide is a difficult guide which involves removing many elements of the camera and soldering to reach the lens.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-



## Step 1 — Mother Board



- Remove all of the screws that hold the back plate in place.
    - Unscrew the 4mm screw that is directly to the right of the viewfinder.
  - On the base,
    - Unscrew the 3mm screw in the top left corner.
    - Unscrew all four 3mm screws under the battery cover.
  - Unscrew the 3mm screw on the right side panel.
  - Unscrew the two 2mm screws on the left side panel.
- ⓘ The bullets apply to the three pictures on the step.




## Step 2

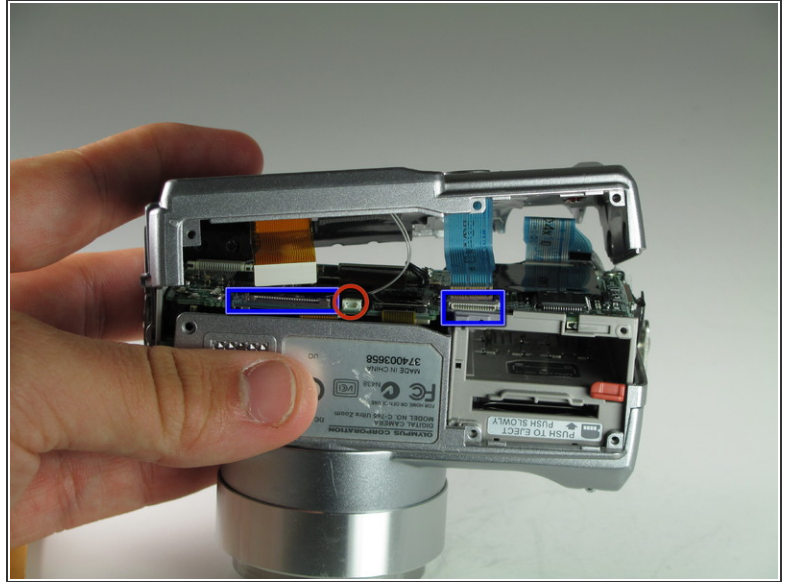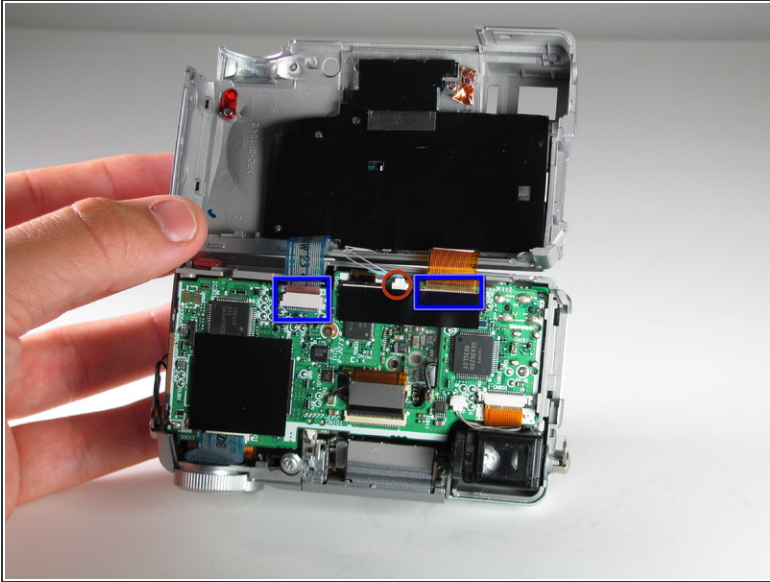


- Now remove the back panel completely.
  - Gently rock the 2 ribbon cables from their sockets.
  - With metal tweezers, grasp and pull white cable out of its clip.


## Step 3

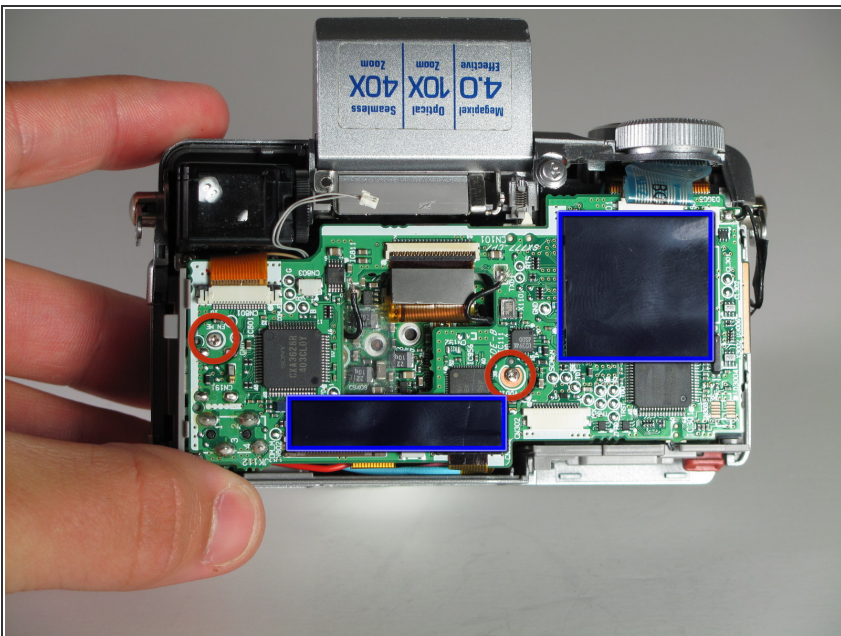

- On the surface of the board,
  - Peel off the plastic sheets on the board.
  - Unscrew 2-3mm from the board itself.


## Step 4

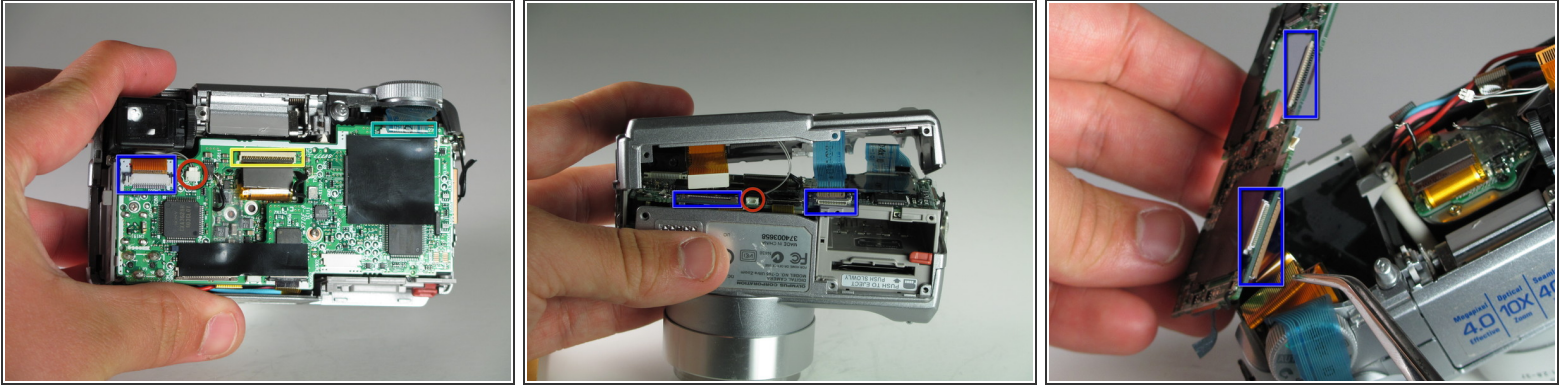

- Loosen the ribbon cables from the board.
    - 1-Directly below the viewfinder.
    - 2-At the Base of the board.
    - 3-At the top right near the selector wheel. 1 on top of the board 2 on the underside.
    - 1-The center of the board, above the central hole.
  - With metal tweezers, remove the two white plastic clips from their sockets one on the base of the board and the other on the surface.
-  The bullets apply to the three pictures on the step.




## Step 5

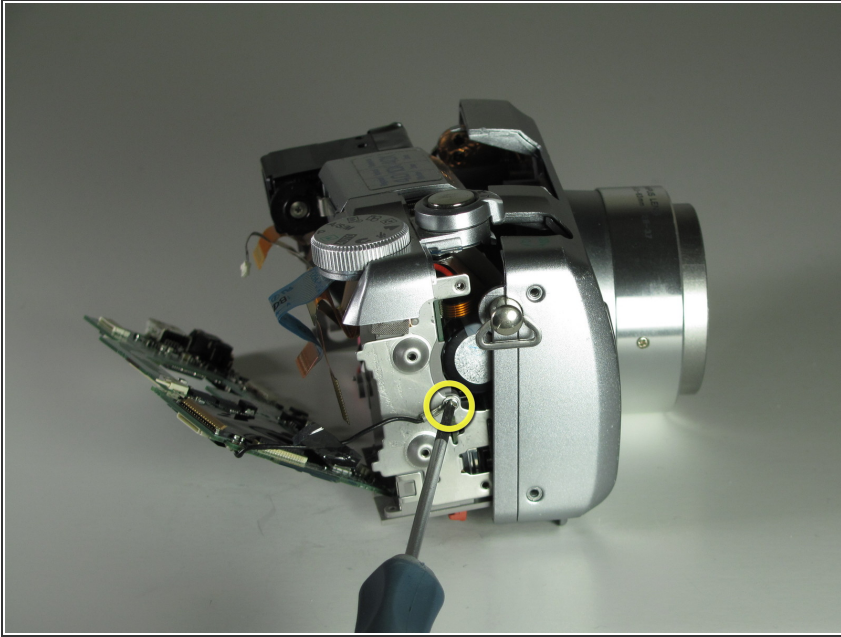


- Remove the single 3mm ground screw attached to the camera body

## Step 6

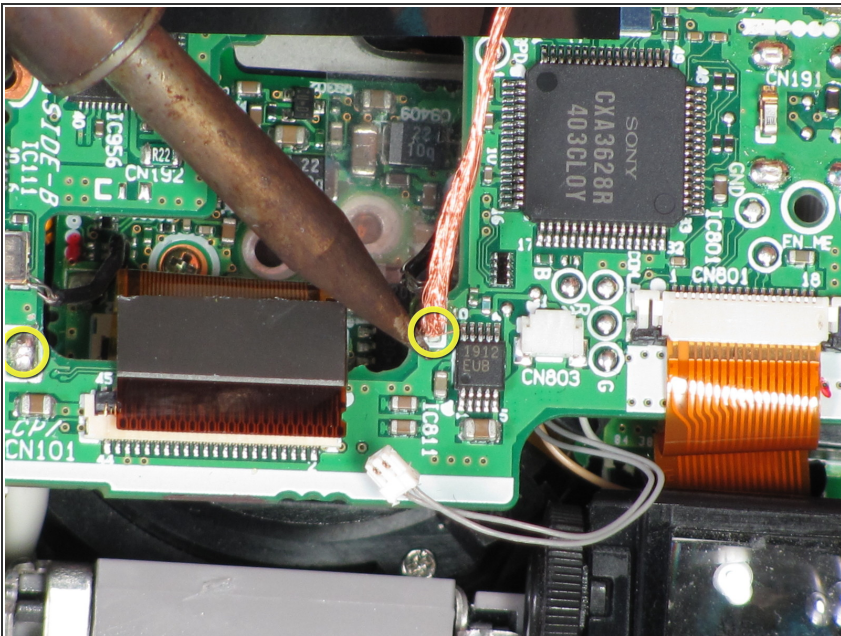


- The mother board has two solder connections that need to be undone to remove the board
- ⚠ Don't attempt to unsolder the joints without previous knowledge of soldering
- ⚠ When soldering avoiding touching any other components with the iron

## Step 7

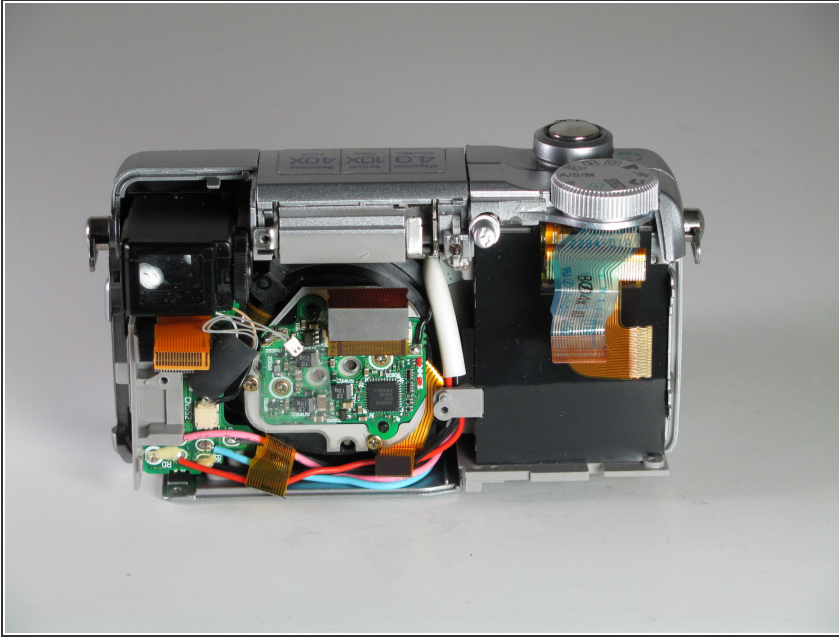

- Once we have the mother board removed it can be replaced with a new board.
- ❗ While the mother board is removed it is possible to get further into the camera itself to make more repairs.


## Step 8 — Lens

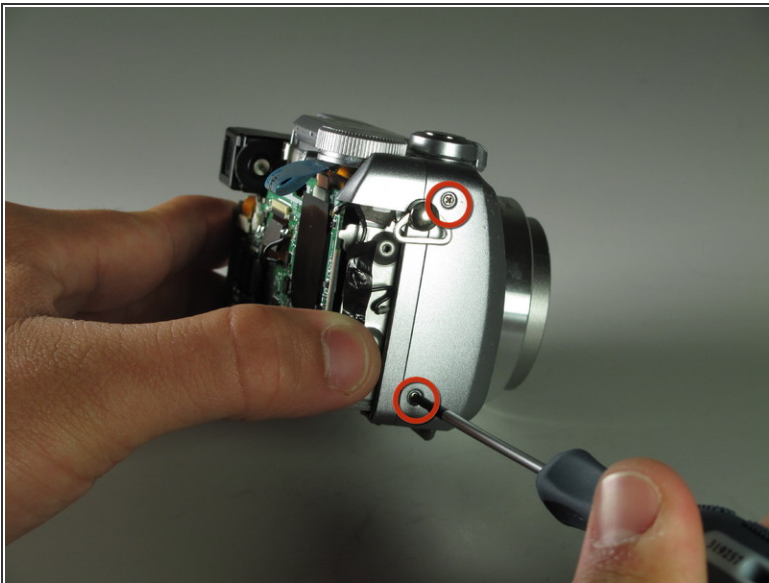

- Now we remove the bulk of the cameras components from the front of the case.
  - Unscrew the 2-3mm Screws from the right side of the casing
- Pop the flash up, to get access to the two body screws underneath
  - Undo the 2-3mm screws




## Step 9

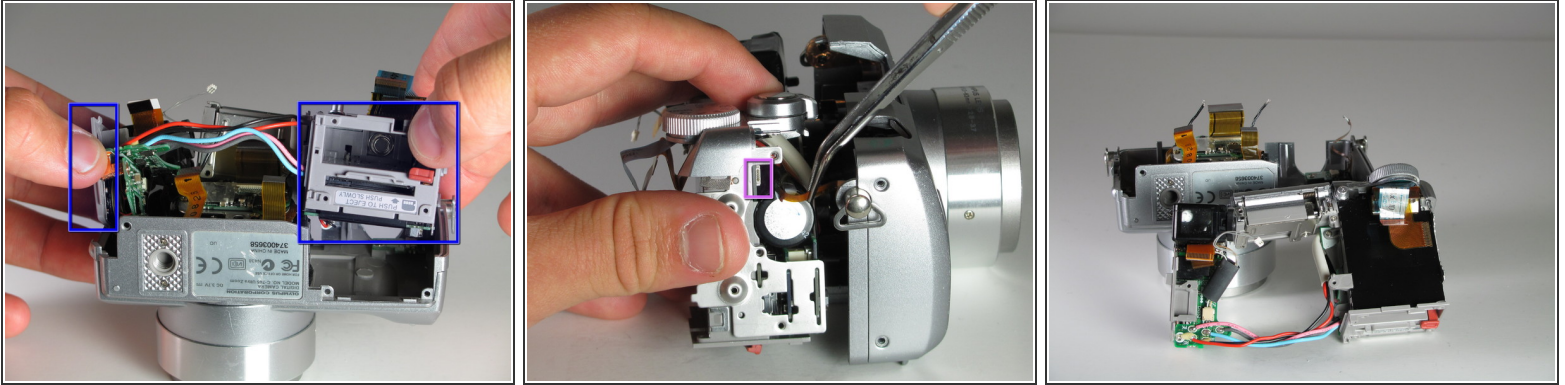

- Gently pull on the battery casing and the A/V ports to remove the connected components
- Remove the small ribbon cable from the right side of the casing

## Step 10

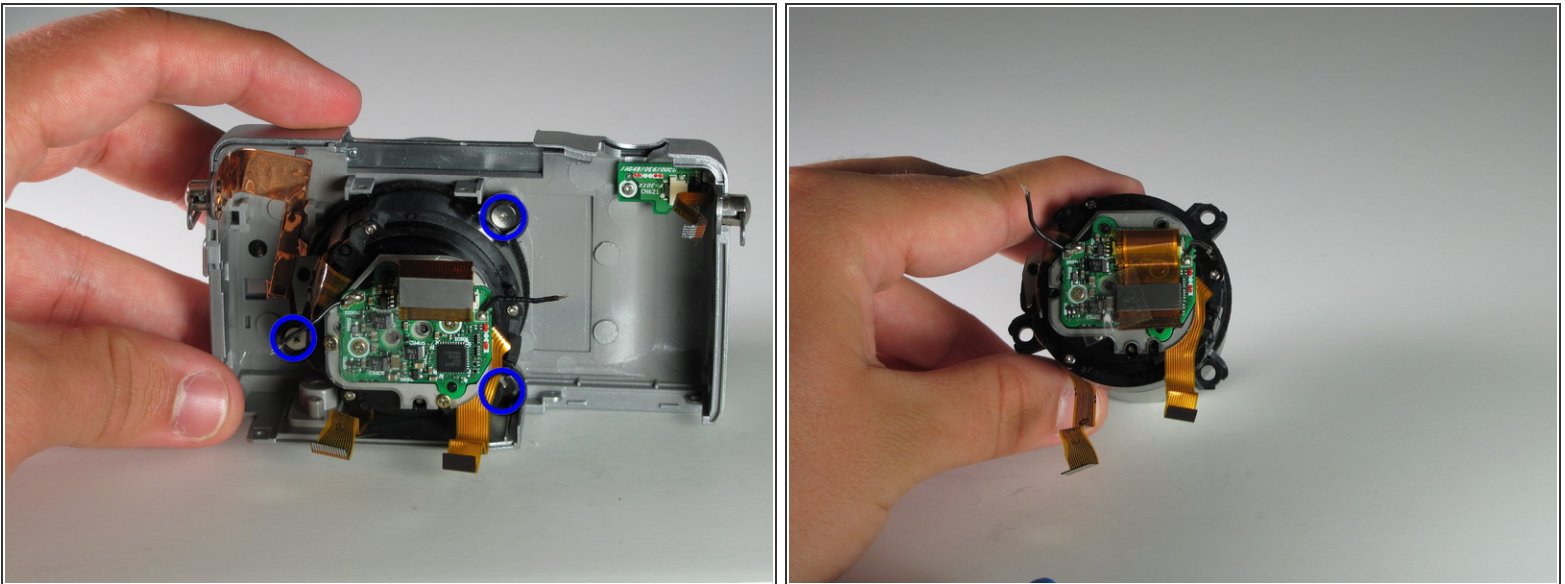

- Remove the lens assembly from front casing of the body
  - Undo the 3 flat top 4mm screws
- The lens can now be gently pulled away from the camera body

**i** The lens can now be replaced or cleaned



To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 09:37:00 AM.